

GRAHAM STUDIOS

Broadcast Furniture

Radius Xp / Curve

Instruction Manual



www.graham-studios.com

(970) 225-1956

Copyright 2011 Graham Studios LLC

This manual is a generic guide. The assembly of a unbalanced "U" is used as an example. Your particular configuration may vary. Please call the factory if you have any questions at (970) 225-1956.

Table of Contents

1. Equipment Cabinet Assembly.....	3
2. Corner / Utility Cabinet Assembly.....	5
3. Tabletop installation	10

Care and Maintenance


Horizontal and vertical surfaces may be cleaned with mild soap and water.

Tools needed :

1. #2 Phillips screw driver (Power drill makes it much easier)
2. 2 each— 7/16" open end wrenches


We will repair or replace any part found to be defective within one year from date of purchase

Radius Cabinet Components


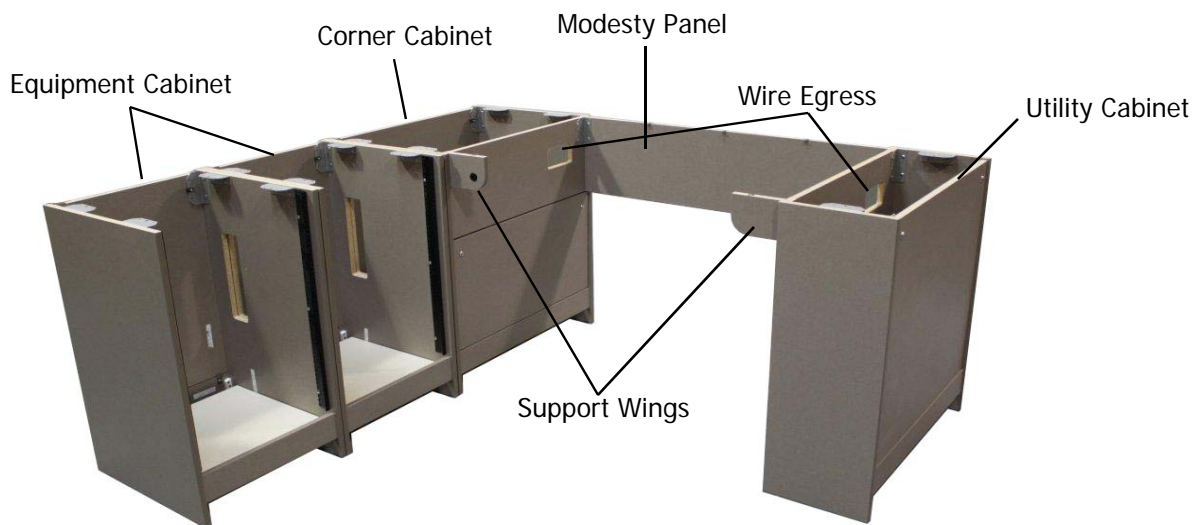


Equipment Cabinet Assembly

Attach 3 Universal Brackets to each leg as shown using 3/4 truss head

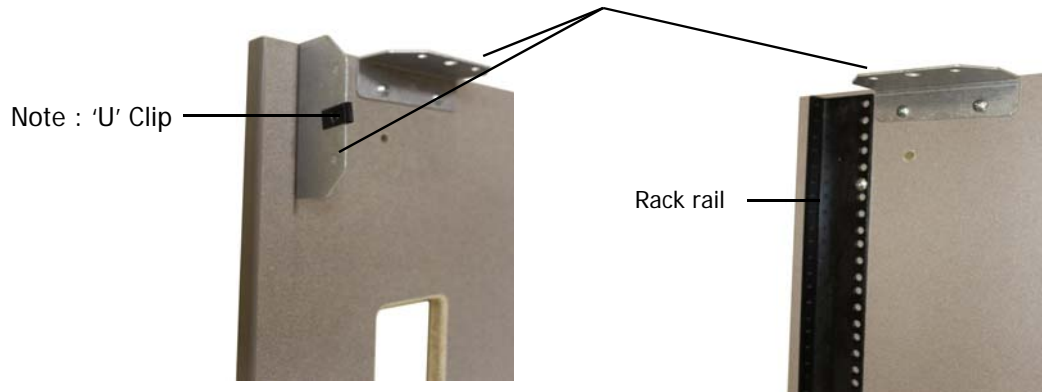

Insert 2 shelf clips on each leg & Attach 2 Stringers

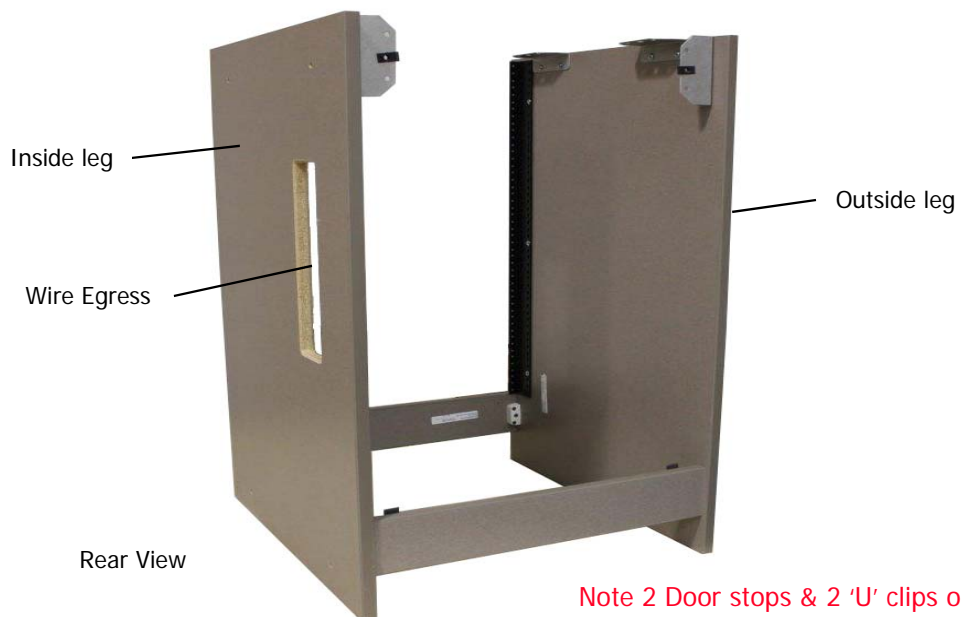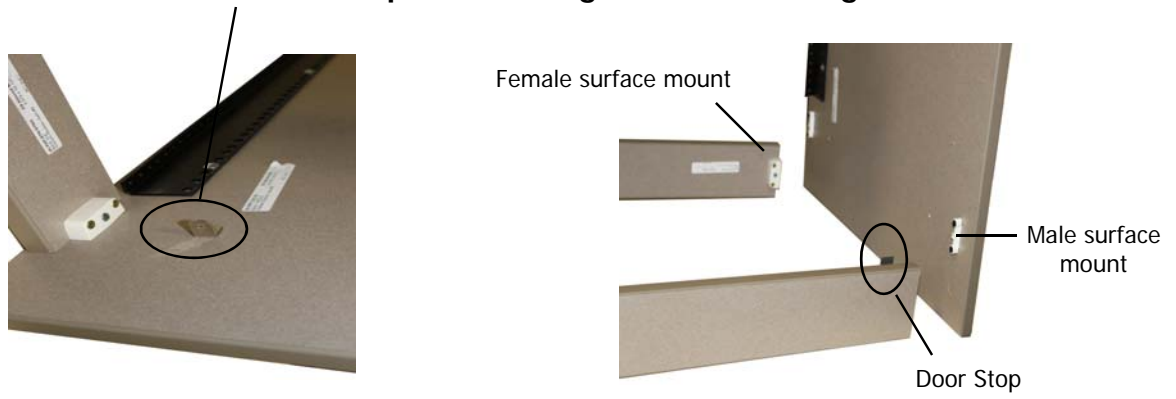

Note 2 Door stops & 2 'U' clips on Universal brackets to secure access door

Secure Bottom with 5/8 pan head Phillips screws




Close-up of shelf clip & Phillips screw in bottom




Rear view of cabinet with bottom

Secure Rear Door with 1/4x20 machine screw with finish washer

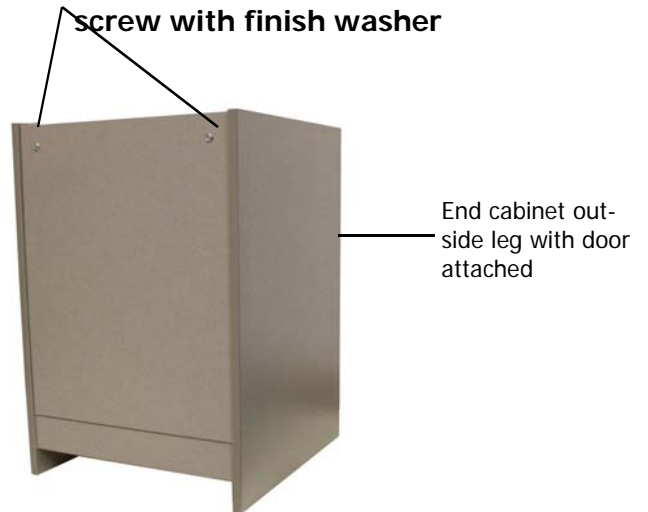

End cabinet outside leg with door attached

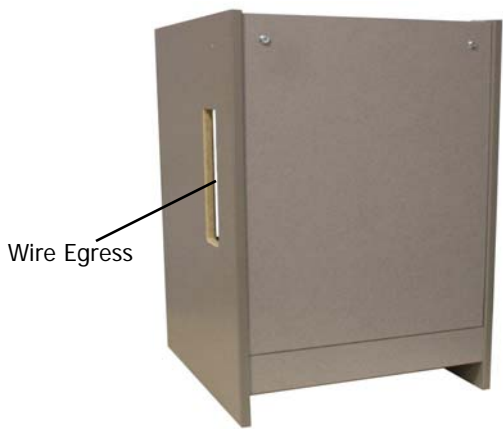

Wire Egress

Rear view of Equipment cabinet



Front view of Equipment cabinet

***Repeat assembly for multiple cabinets**


Corner / Utility Cabinet Assembly

*Corner cabinets are deeper than Utility Cabinets
but both are assembled in the same way*


Attach 4 Universal Brackets on each leg w/ 3/4 Truss head



Attach stringers to legs

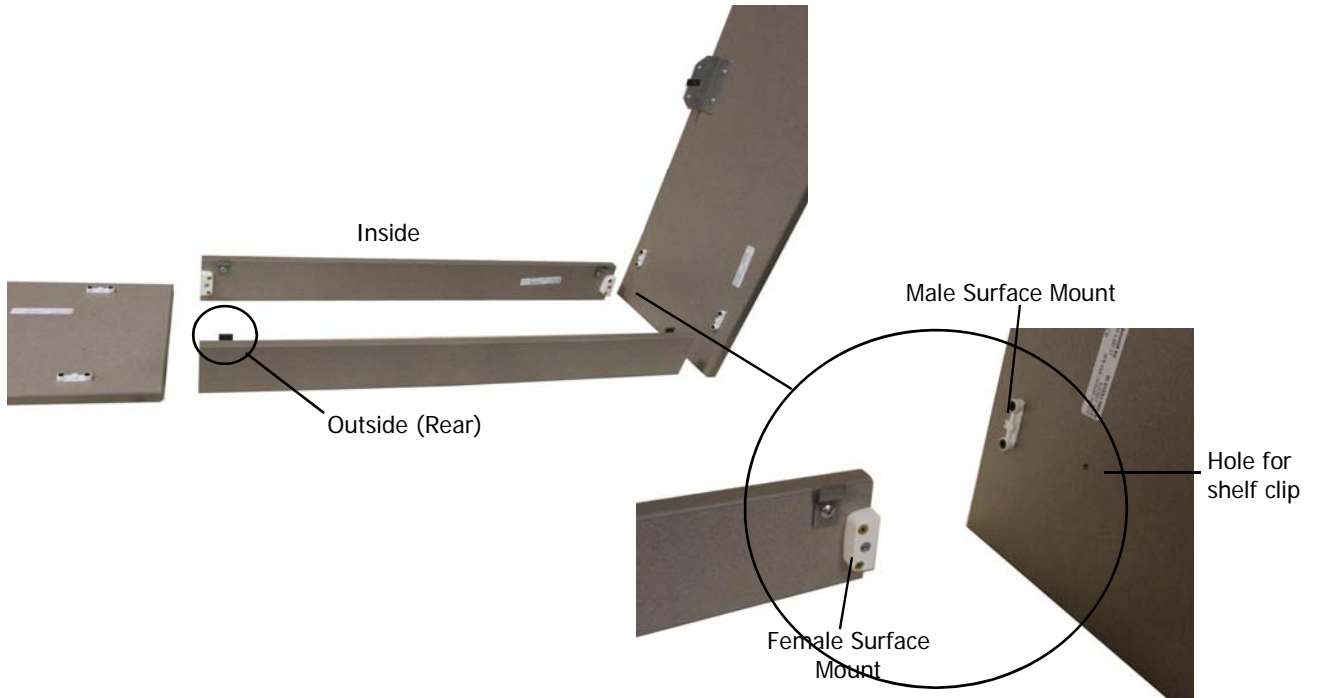

Insert 2 clips on each leg

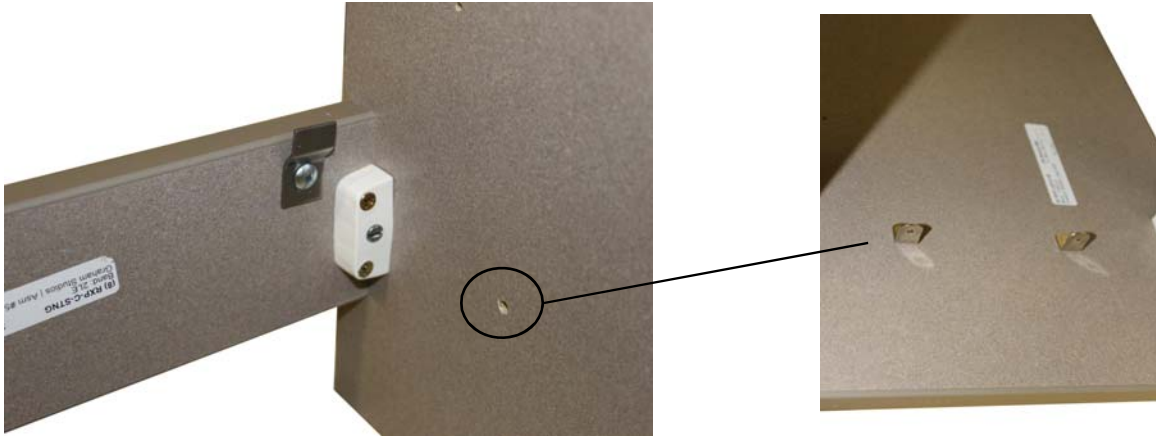

Attach Bottom with 5/8 Phillips screws



View of Bottom installed

Note locations of Universal Brackets with 'U' Clips




Upright view (Back)

Secure MPC Panel and Attach Support Wings


Utility cabinet

Bolt support wing on MPC panel with 1/4 x 20 Bolts

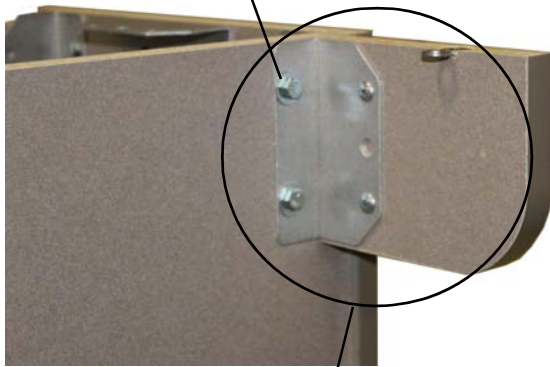

Right side of the front of MPC panel

Secure MPC panel at this corner with 3/4 truss head screws

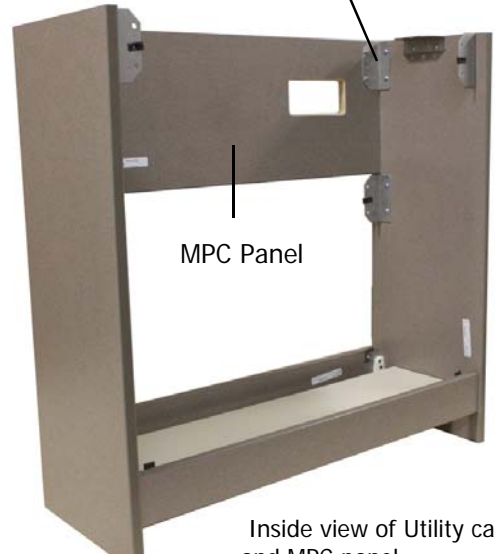


Inside view of Utility cabinet and MPC panel




** Ensure that the wing is flush with the top of adjoining leg**

Corner cabinet

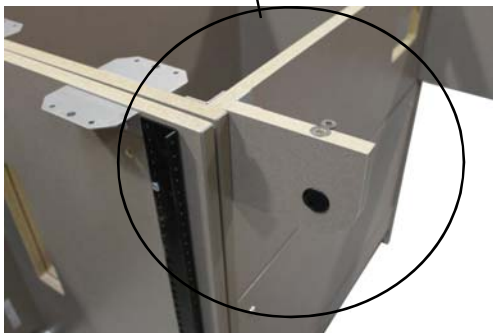

Support wing on corner cabinet

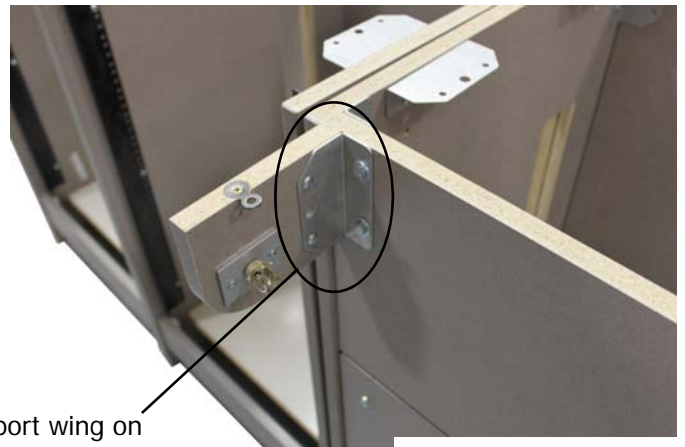

Bolt support wing on MPC panel with 1/4 x 20 Bolts

Inside view of support wing on corner cabinet

Attach Rear Door with 1/4 x 20 and finish washer



Rear view



Inside view

Attach inside door with 1/4 x 20 screws and finish washers



Finished view

Bolt Equipment Cabinets Together with 1/4 x20 Bolts


Lay cabinets on their backs to get to the two under the bottom



Mounting Holes


Wire Egress

2 Mounting holes are under floor on each leg

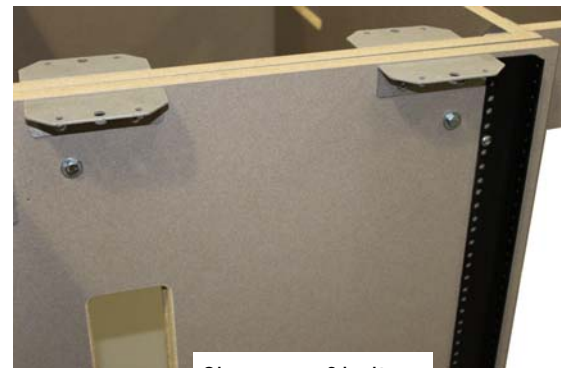

Close-up of bolts

View of Assembled triple cabinet section

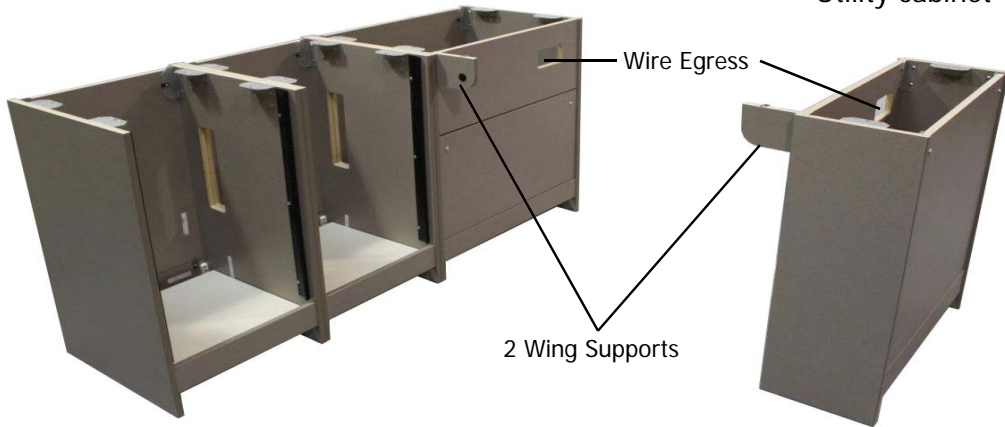


Utility cabinet

Wire Egress

2 Wing Supports

Secure Modesty Panel with Universal brackets and 3/4 truss head screws

Ensure that the Modesty Panel is flush with the tops of the legs

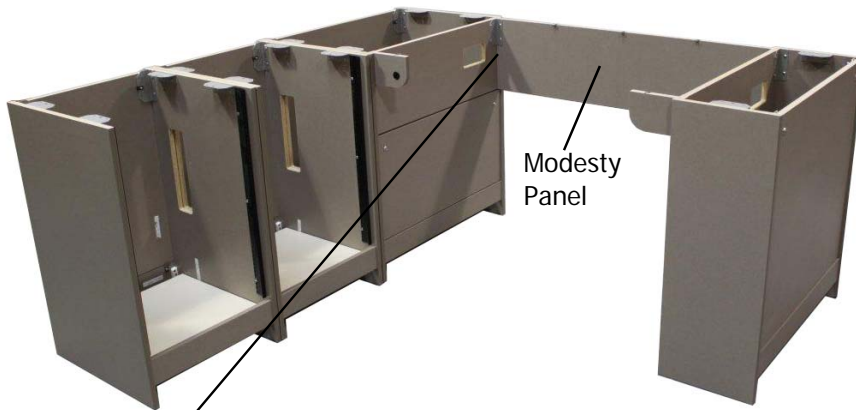


Modesty Panel



Install 3 Figure 8's on Modesty Panel


Close-up view of inside corner cabinet with Universal brackets

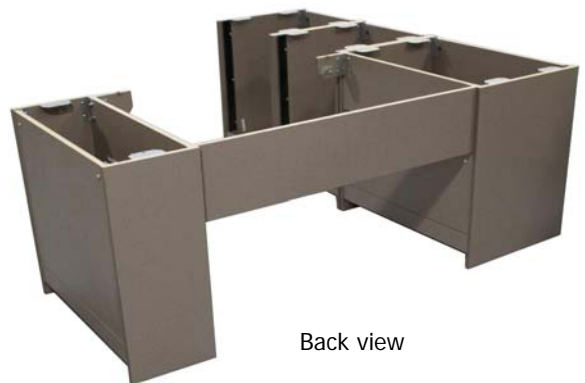

Back view

Tabletop Installation

Secure Guest HP assembly with 3/4 Truss head screws on underside of interview top

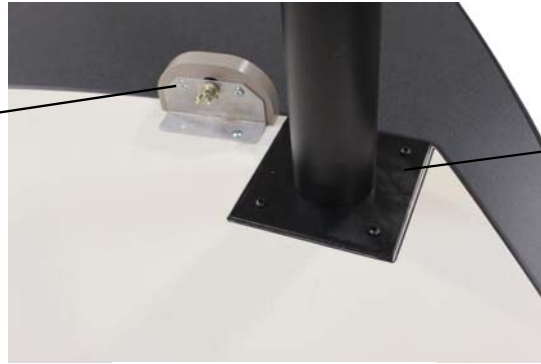

Attach legs w/ 1" Phillips pan head screw

Underside of Interview Top

Secure interview top with 3/4 Truss head screws in pre-drilled holes.

Do NOT tighten screws until all tops are installed



Attach adjacent top w/ 3/4 truss head screws. Secure modesty panel w/ 3/4 truss head screws & figure 8's previously installed

Secure final top with 3/4 truss head screws.



Align top for fit & tighten screws as needed